

Changing The Handle On A Low Voltage Hose.


Step 1.

Remove the single screw next to the switch.



Step 2.

Lift the top cover off of the handle. The switch will be attached.

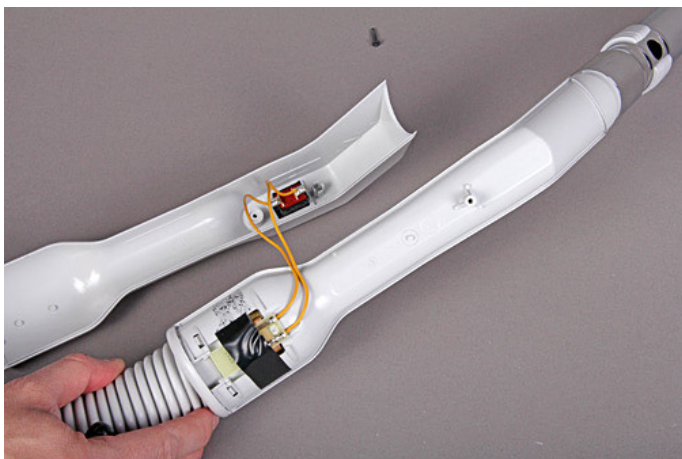

Step 3.

To remove the switch, press in the two plastic tabs on the underside of the rocker switch. Remove the black tape holding the small board to the hose.



Step 4.

On the underside of the handle at the hose connection, there is a plastic ring held on by a tab. With a flat-head screwdriver, press in the tab and pull back on the ring.




Step 5.

Two smaller tabs are on the top of the ring, press these in and remove the ring from the handle.



Step 6.

Remove the hose end from the old handle and insert into the new handle. Lock into place by pressing the plastic ring into the end of the handle.

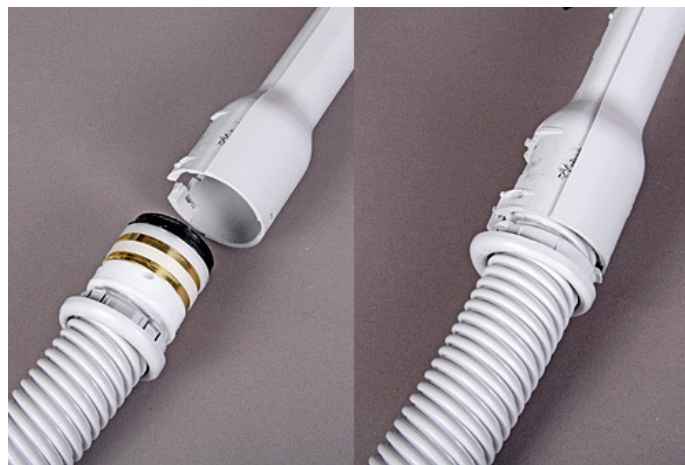

Step 7.

Place the switch from the old handle into the new handle securing the contacts to the hose with the original tape.



Step 8.

Replace the top cover of the handle and insert the new screw included with the handle.

